



Aspen Assembly Manual

© 2012 Woosh Bikes Limited

Tel. 01702 435566 - E-mail: support@wooshbikes.co.uk

Thank you for your purchase of a Woosh Aspen electric bike.

This model is sometimes delivered with the front wheel off, in which case you will need to refer to these assembly Instructions. Even if your bike has been delivered with its wheel on, we still advise that you read this particular manual carefully, and the section about checking the bike before use especially.

The second manual, or 'User Manual' refers to the general operation of the bike and should also be read thoroughly before use.

Warning:

Two people are required when lifting/moving the carton.

Introduction:

Congratulations on your purchase of a Woosh Aspen electric cycle. Your Woosh electric cycle comes mostly assembled, but obviously to enable the cycle to be flat-packed, some parts of the cycle require a small amount of assembly to be completed before use. This manual assumes you are reasonably competent with and have your own toolkit.

Disclaimer:

You are responsible for the correct assembly and ongoing maintenance of your cycle. Woosh Bikes Ltd. accepts no responsibility for any incidents that may arise as a result of bikes which have been poorly assembled/maintained by the end user. **All** steps in this booklet must be completed to ensure trouble-free and safe operation.

*****IMPORTANT NOTE re spokes and tyres*****

Your bike will have had its spokes checked and tightened before despatch. If you check them on arrival, you will find some are slightly looser than others. This ensures that the wheel is true and is quite normal.

In future, however, you should check your spokes regularly (once a week if the bike is used daily, once a month if used only occasionally) as the motor vibrations will cause them to loosen more than on a standard bike. If you leave them loose, you will damage the wheel and possibly cause an accident.

How to check: lightly 'ping' each spoke like a harp string. If it feels very loose, take the spoke key we have supplied (round metal gauge), and insert it on to the nipple of the spoke in question, using gauge number 13. The nipple is the metal connector at the base of the spoke where it joins the rim on the tyre. Give it a short quarter turn or so. Do NOT overtighten the nipple as it may then be too rigid and snap completely during riding. If you lose your spoke key,

another can be supplied for £4.

Also check and pump up your tyres regularly—again, weekly if the bike is used daily, monthly if used occasionally.

ADDITIONAL STEPS BEFORE YOUR FIRST RIDE:

All items on the bike should be double checked to ensure that all parts are correctly fitted and that all the nuts and bolts are as tight as they should be. This step should be repeated after one week of use, and then at regular intervals and every one to two weeks thereafter.

The tyres need to be checked/pumped up. The pressure range is between 40 to 65 psi depending on the weight of the user.


You should also check that brakes and gears are thoroughly checked and adjusted to your satisfaction.

If you are unsure about how to carry out any of these steps you should contact your local bike shop. Their fees will be payable by you and will not be refunded by us.

Charging the battery:

To recharge the battery, lift the handle on the battery at the rear of the bike, attach the charger to the socket on the right side of the battery as shown below. Plug the other end into the mains. The battery does not have to be removed from the bike to be charged, but it can be removed and charged in another location if you prefer.

There is a small indicator on the charger which glows red while charging and changes to green when charging is complete.

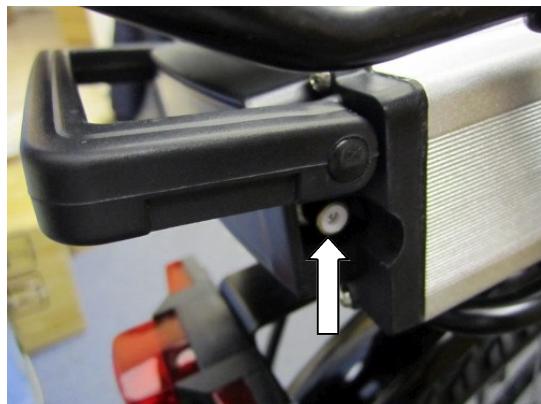

Before attempting to ride the bike, please be sure to completely read and understand the user-manual which was included with your bike.

Step 1 – Opening the carton.

Keep the carton upright, remove the shipping straps and cut the tape seals. Remove the wheel from the carton, being careful not scratch the bike as you do this. Now lift the bike out of the carton and lean it against a sturdy surface/wall. Do not destroy the carton as it will be required if the bike needs to be returned for any reason in the future.



Step 2 – Unpacking

Cut the cable ties and detach the pedals, handlebars and charger etc. from the bike, and then remove the remaining packaging materials.

Once the packaging has been removed, undo the bolts that hold the handle-bar clamp in place and remove the clamp. Line up the handle-bars and then replace the clamp to secure the handle-bars in place. There is a ribbed section on the handle-bars, this should sit centrally within the bracket.



To adjust the height of your handlebars, you need to loosen the allen bolts on the sides of the handlebar clamp, and you will also need to undo the bolt on the underside of the handlebar clamp and remove the locking piece as shown.



You can now rotate the handlebars upwards/towards the rider, make sure that the various cables aren't pulled too tightly as this may restrict the turning of the handlebars and/or damage the cables. Replace the locking piece and re-tighten the allen bolts to secure the handlebars in place.



Step 7 – Front Mudguard

Remove the packaging from the mudguard if you haven't already done so.

Remove the nut from the bolt just behind the front brake assembly, this also secures the light, so be careful not to let the light fall. Offer up the mudguard tag to the rear side of the frame and then finger tighten the nut back into position.

Secure the silver arms to the front forks using the bolts provided, and then adjust the height if required and then tighten the nut securing the tag. It may be necessary to angle the silver arms to get the best clearance from the tyre, as shown below.




Step 6 - Pedals

The pedals are designed to fit on a specific side of the bike, do NOT attempt to fit the pedals without first checking which side of the bike the pedal is meant for. To identify which pedal goes on which side. The 'R' and 'L' indicates which side of the bike the pedal should be fitted to.

Fit each pedal into position and hand tighten. Once each pedal has been tightened nearly all the way in by hand, use the 15mm spanner to fully secure the pedals in place.

Note: turn the **left** pedal counter-clockwise to tighten.

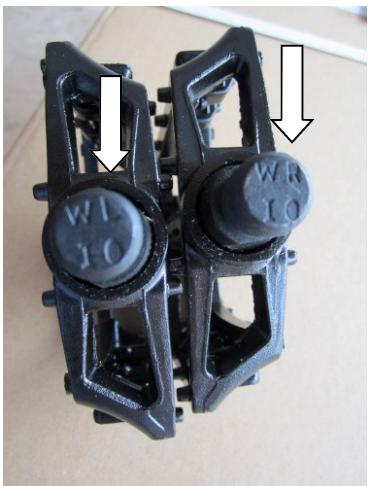


Step 3 – Front Wheel

Lift the front of the bike slightly and remove the protective plastic from the front forks. Place front of bike gently back down.

Fetch the front wheel and loosen off the fixings on either side if necessary to allow the wheel to be fitted. You may wish to turn the bike upside down to fit the wheel, but if you aren't able to, follow the steps below.


Lift the front of the bike holding the bike frame and then carefully lower the bike onto the wheel ensuring that the wheel is seated in the correct position.

Finger tighten the nuts/clamp on either side of the wheel so that when the clamp is engaged, the wheel is fully secured. You can now use the 'bike stand' to keep the bike upright.

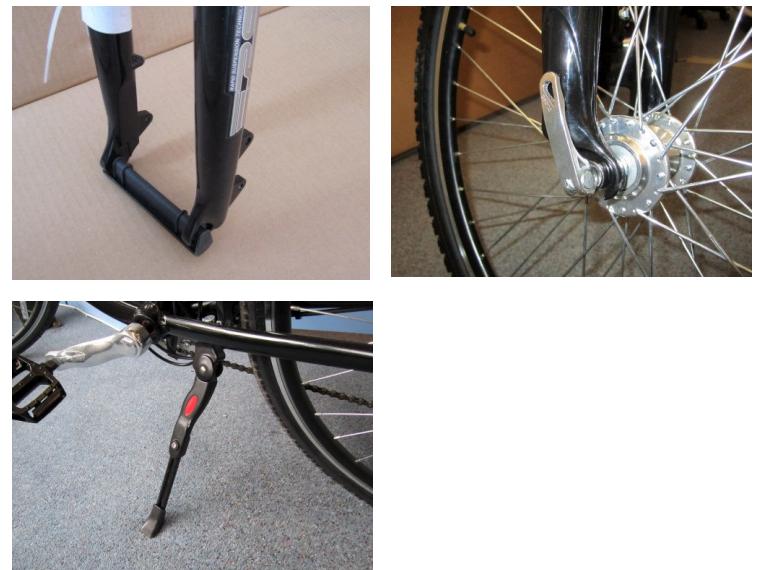

Step 4 – Front Brakes

Fit the curved metal section into the receptacle on the left of the brake assembly. You may need to loosen the cable clamp on the right side of the brake assembly to do this. Re-tighten the brake cable clamp ensuring the correct tension and the correct position of the brake-pads with relation to the wheel rim. You may need to adjust the position of the brake pads, use the supplied Allen key to do this. For a guide on adjusting your brakes, see the support section of our website at www.wooshbikes.co.uk

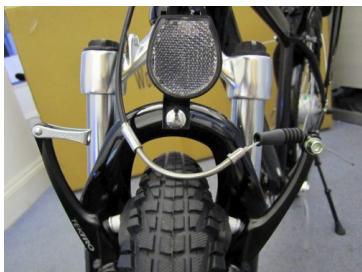

Now is a good time to release the front suspension which is locked for transit purposes, this is done by twisting the cap above the right fork. Failure to observe this step will result in an uncomfortable ride.



Step 5 – Saddle

The saddle is already fitted, but to adjust the height of the saddle, open the clamp and position the saddle at the desired height and then close the clamp to lock the saddle into position. It may be necessary to tighten the thumb screw a little to ensure that when the clamp is closed the saddle is properly secured.

