 
 



⑨ Battery capacity



Full capacity



 
Low capacity




You need to charge
the battery immediately

USER'S MANUAL

for
Operation Panel

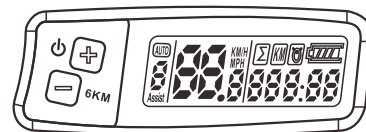

BUTTONS AND DISPLAY SYMBOLS OF THIS PANEL

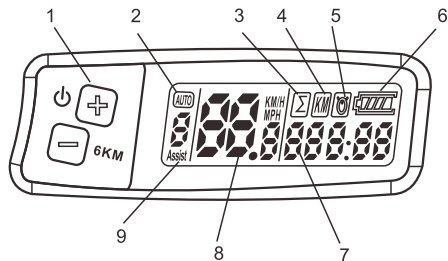

1. + / - button
2. Automatic mode
3. Total distance
4. Single trip distance
5. Single trip time
6. Battery capacity
7. Kilometer/Mile
8. Current speed
9. Assistance level

1

Normal Operation Instruction

① ON/OFF function

Please click button to turn on the panel; While to keep pressing button for 4 seconds, you can switch off the panel.

② Background light

When the panel is on, please keep press button for 2 seconds to turn on/off the background light and F/R light.

③ Assistance level

To adjust assistance level between Assist 1 and Assist 6 by touching buttons.



④ Start-Aid function

When the panel is on, please keep press button for 2 seconds, the bike will get into 6KM/H AIDING START state. It means even though you don't pedal the bike forward, the bike can start moving directly at max speed of 6KM/H only.



⑤ Clearing of the single trip time and distance

When the panel is on, please keep touching two buttons together for 3 seconds, the system will automatically clear out the records of single cycling time and distance.



2

⑥ To switch the function of total distance, single trip time and single trip distance

When the panel is on, the panel system will switch the function of total distance, single cycling time and single cycling distance by touching two buttons together.

⑦ To set wheel dia

When the panel is on, please keep touching two buttons together for 10 seconds, the panel system will get into the state to set the wheel dia. Riders can select the 16in, 20in, 24in, 26in, 700C and 28in by pressing the button or separately. After finishing to set the wheel dia, riders can exit this system by press together for 1 seconds.

Note: Usually wheel diameter has been set in our factory already according to the bike actual situation. Please keep our original factory setting.

⑧ To set up the max speed

When the panel is on, please keep touching two buttons for 5 seconds, the panel system will get into the situation to set up the maximize speed.



3